

MEPROLIGHT® NIGHT SIGHT SYSTEM

ML-83112
"Registered Patent"
MEPRO EVERGREEN™
for CZ Pistols

- ✓ 3 Dot Set
- ✓ Models: CZ P07; CZ P09

General Instructions

WARNING: Before starting, make sure the weapon is unloaded.

- Remove the slide assembly from the pistol. Follow the manufacturer's instructions for removal.
- Remove the old/stock sight/s from the slide in accordance with the manufacturer's standard procedures.
- If you are unsure about the removal or installation of the sights or do not have the proper tools, contact a qualified gunsmith to perform the work.


Cleaning

- Use a suitable solvent (acetone or the like) to clean the following parts from any gun oil residue:
 - The slide assembly front dovetail and rear dovetail groove.
 - The front sight and the rear sight contacting surfaces.

CAUTION: To prevent damage to non-metallic surfaces, do not use any cleaning solvents on or around the sight dot/s area.


Front Sight Installation

- Remove the dovetail setscrew. Apply LOCTITE® 609 threadlocker on the setscrew thread. Install the dovetail setscrew. Do not fasten.
- Apply LOCTITE® 609 threadlocker on angled surfaces of both the dovetail and dovetail groove.
- Install the dovetail in the dovetail groove. Use a 0.9 mm Hex Key to fasten the setscrew tightly.

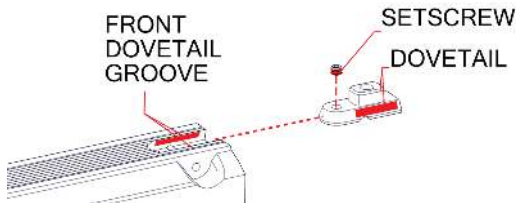


- Apply LOCTITE® 609 threadlocker on the front screw thread.
- Install the front sight with the front screw on the dovetail. Position the sight such that the illuminated dot is facing the shooter.
- Use a Torx T8 screwdriver to fasten the front screw tightly.

NOTE: Make sure that the installation procedure is made long before the threadlocker cures. After installation, allow a **minimum of 8 hours** for the thorough curing of the threadlocker.

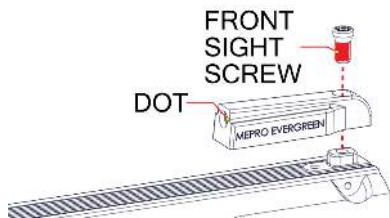


Rear Sight Installation

- Apply LOCTITE® 609 threadlocker on angled surfaces of both the rear dovetail and rear dovetail groove.
- Install the dovetail in the dovetail groove. Position the dovetail in a centered position.

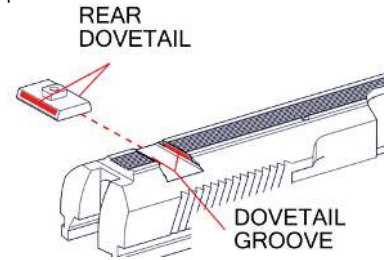

- Apply LOCTITE® 609 threadlocker on the rear screw thread.
- Position the rear sight in its place. Position the sight such that the illuminated dots are facing the shooter.
- Install the rear sight screw. Use a Torx T8 screwdriver to fasten tightly while checking that the sight is still centered.

NOTE: Make sure that the installation procedure is made long before the threadlocker cures. After installation, allow a minimum of 8 hours for the thorough curing of the threadlocker.

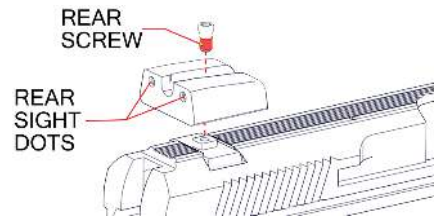

Aiming

Align the pistol towards the target. Target acquisition is achieved when the front aiming dot is aligned and centered between the Rear Sight dots.

Care and Maintenance of the Sight

Before shooting, make sure the aiming dot/s are clean. If necessary, wipe with a clean, dry cloth of soft cotton, rice paper or lens tissue.

NOTE: Do not use clothing fabric or other rough materials for cleaning.

CAUTION: To prevent damage to non-metallic surfaces, do not use any cleaning solvents such as acetone on or around the sight dot/s area.

MEPROLIGHT® SIGHTS

Made in Israel

Manufactured by:
Meprolight

An ISO 9001 Quality Company
ISO14001 environment
OHSAS 18001 safety

For inquiries, please contact:

International (Outside the USA)
e-mail: sales@meprolight.com
e-mail: support@meprolight.com
www.meprolight.com

USA
e-mail: sales@meprolight.us
e-mail: support@meprolight.us
www.meprolight.us

Rev. B, Oct. 2020, P/N: 831009000012