

# MEPROLIGHT® NIGHT SIGHT SYSTEM

**ML- 83151**  
"Registered Patent"  
**MEPRO EVERGREEN**  
for H&K Pistols

- ✓ 3 Dot Set
- ✓ Models: VP9/SFP; 45

## General Instructions

**WARNING:** Before starting, make sure the weapon is unloaded.

- Remove the slide assembly from the pistol. Follow the manufacturer's instructions for removal.
- Remove the old/stock sight/s from the slide in accordance with the manufacturer's standard procedures.
- If you are unsure about the removal or installation of the sights or do not have the proper tools, contact a qualified gunsmith to perform the work.

## Cleaning


- Use a suitable solvent (acetone or the like) to clean the following parts from any gun oil residue:
  - The slide assembly front dovetail and rear dovetail groove.
  - The front sight and the rear sight contacting surfaces.

**CAUTION:** To prevent damage to non-metallic surfaces, do not use any cleaning solvents on or around the sight dot/s area.

- Wipe all contacting surfaces clean and dry.


## Front Sight Installation

- Apply LOCTITE® 609 threadlocker on both angled surfaces of the front dovetail groove and front dovetail.
- Install the dovetail in the dovetail groove. Position the dovetail in a centered position.

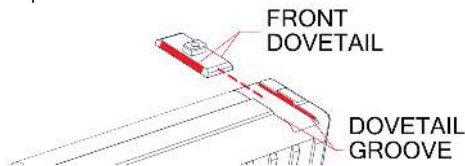


- Apply LOCTITE® 609 threadlocker on the front screw (6 mm) thread.
- Install the front sight with the front screw (6 mm) on the dovetail.
- Position the sight such that the illuminated dot is facing the shooter. Use a Torx T8 screwdriver to fasten the screw tightly while checking that the sight is still centered.
- Use a Torx T8 screwdriver to fasten the front screw tightly.

**NOTE:** Make sure that the installation procedure is made long before the threadlocker cures. After installation, allow a **minimum of 8 hours** for the thorough curing of the threadlocker.

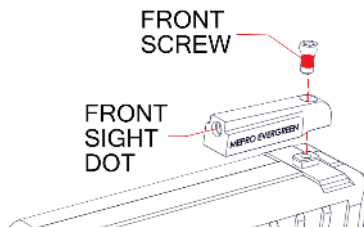


## Rear Sight Installation

- Apply LOCTITE® 609 threadlocker on angled surfaces of both the rear dovetail and rear dovetail groove.
- Install the dovetail in the dovetail groove. Position the dovetail in a centered position.

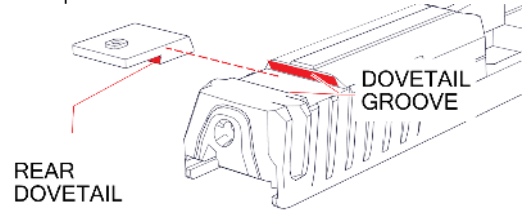

- Apply LOCTITE® 609 threadlocker on the rear screw (4.5 mm) thread.
- Position the rear sight in its place. Position the sight such that the illuminated dots are facing the shooter.
- Install the rear sight screw (4.5 mm). Use a Torx T8 screwdriver to fasten tightly while checking that the sight is still centered.

**NOTE:** Make sure that the installation procedure is made long before the threadlocker cures. After installation, allow a minimum of 8 hours for the thorough curing of the threadlocker.

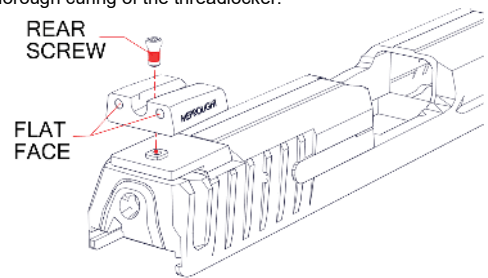

## Aiming

Align the pistol towards the target. Target acquisition is achieved when the front aiming dot is aligned and centered between the Rear Sight dots.

## Care and Maintenance of the Sight

Before shooting, make sure the aiming dot/s are clean. If necessary, wipe with a clean, dry cloth of soft cotton, rice paper or lens tissue.

**NOTE:** Do not use clothing fabric or other rough materials for cleaning.

**CAUTION:** To prevent damage to non-metallic surfaces, do not use any cleaning solvents such as acetone on or around the sight dot/s area.

## MEPROLIGHT® SIGHTS

Made in Israel

Manufactured by:  
Meprolight

An ISO 9001 Quality Company  
ISO14001 environment  
OHSAS 18001 safety

For inquiries, please contact:

### USA

e-mail: sales@meprolight.us  
e-mail: support@meprolight.us  
www.meprolight.us

### International (Except The USA)

e-mail: sales@meprolight.com  
e-mail: support@meprolight.com  
www.meprolight.com

Rev. A, Oct 2020, P/N: 831009000051