

# MEPROLIGHT® NIGHT SIGHT SYSTEM

ML-83121  
"Registered Patent"  
MEPRO EVERGREEN  
for WALTHER Pistols

- ✓ 1 Dot Set
- ✓ Model: PPQ

## General Instructions

**WARNING:** Before starting, make sure the weapon is unloaded.

- Remove the slide assembly from the pistol. Follow the manufacturer's instructions for removal.
- Remove the old/stock sight/s from the slide in accordance with the manufacturer's standard procedures.
- If you are unsure about the removal or installation of the sights or do not have the proper tools, contact a qualified gunsmith to perform the work.

## Cleaning


- Use a suitable solvent (acetone or the like) to clean the following parts from any gun oil residue:
  - The slide assembly front well and rear dovetail groove.
  - The front sight and the rear sight contacting surfaces.

**CAUTION:** To prevent damage to non-metallic surfaces, do not use any cleaning solvents such as acetone on or around the sight dot/s area.

- Wipe all contacting surfaces clean and dry.


## Front Sight Installation

- Completely fill the screw hole of the front sight to the top with LOCTITE® 609 threadlocker.

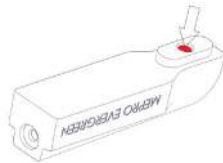


- Hold the slide upside down.
- Position the front sight in its place on the slide. Position the sight such that the illuminated dot is facing the shooter. Hold the sight with your finger.
- Install the front screw. Use a 3/16" socket driver to fasten lightly.
- Ensure that the front sight is aligned and centered on the slide.
- Use a 3/16" socket driver to fasten the front screw tightly.

**NOTE:** Make sure that the installation procedure is made long before the threadlocker cures. After installation, allow a **minimum of 8 hours** for the thorough curing of the threadlocker.

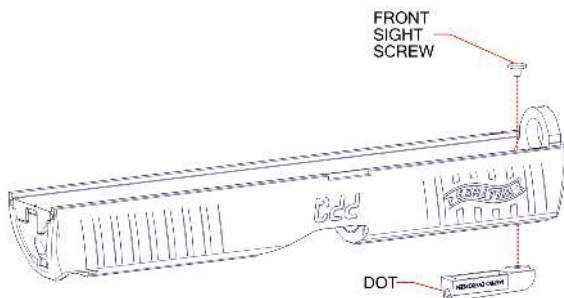


## Rear Sight Installation

- Install the Adjuster Screw to the rear sight. Note that the Adjuster Screw has a left-hand thread.
- Fit the rear sight into the slide.

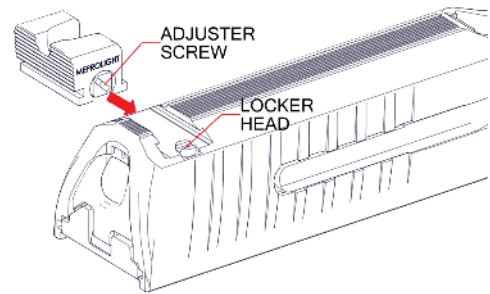

- Press the Locker Head down, and push the rear sight until the Adjuster Screw's head seats inside the Locker Head's groove.

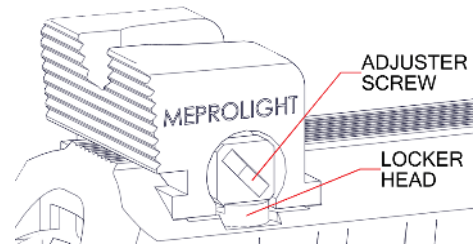

## Aiming

Center the rear sight on the slide by turning the Adjuster Screw left or right.

Align the pistol towards the target. Target acquisition is achieved when the front aiming dot is aligned and centered in the rear sight's U-shaped notch.

## Care and Maintenance of the Sight

Before shooting, make sure the aiming dot/s are clean. If necessary, wipe with a clean, dry cloth of soft cotton, rice paper or lens tissue.

**NOTE:** Do not use clothing fabric or other rough materials for cleaning.

**CAUTION:** To prevent damage to non-metallic surfaces, do not use any cleaning solvents such as acetone on or around the sight dot/s area.

## MEPROLIGHT® SIGHTS

Made in Israel

Manufactured by:  
Meprolight

An ISO 9001 Quality Company  
ISO14001 environment  
OHSAS 18001 safety

For inquiries, please contact:

**USA**  
e-mail: sales@meprolight.us  
e-mail: support@meprolight.us  
www.meprolight.us

**International** (Except The USA)  
e-mail: sales@meprolight.com  
e-mail: support@meprolight.com  
www.meprolight.com

Rev. A, Jan. 2021, P/N: 831009100021